

IPUPS-5-11-F

Buffer power supply for 5 IP cameras, indoor enclosure switch PoE 10/100Mbps 5xPoE + 1xUplink


INSTRUCTION MANUAL

IPUPS-5-11-F is a buffer power supply for IP CCTV cameras. The device is a convenient solution for buffer power for monitoring cameras that require uninterrupted operation. The device is designed to work with IP cameras and other network devices powered in the PoE 802.3at / af and PoE PASSIVE standard.

The LONG RANGE mode allows to increase the transmission range up to 280 m using standard UTP cable.

The system is designed to work with lead-acid or SLA batteries.

The device is enclosed in the internal housing of the ABOX series, which is a convenient solution to the problem in the construction of monitoring devices and the wiring inside buildings. The housing is made of steel sheet painted with semi-matt, white color paint.

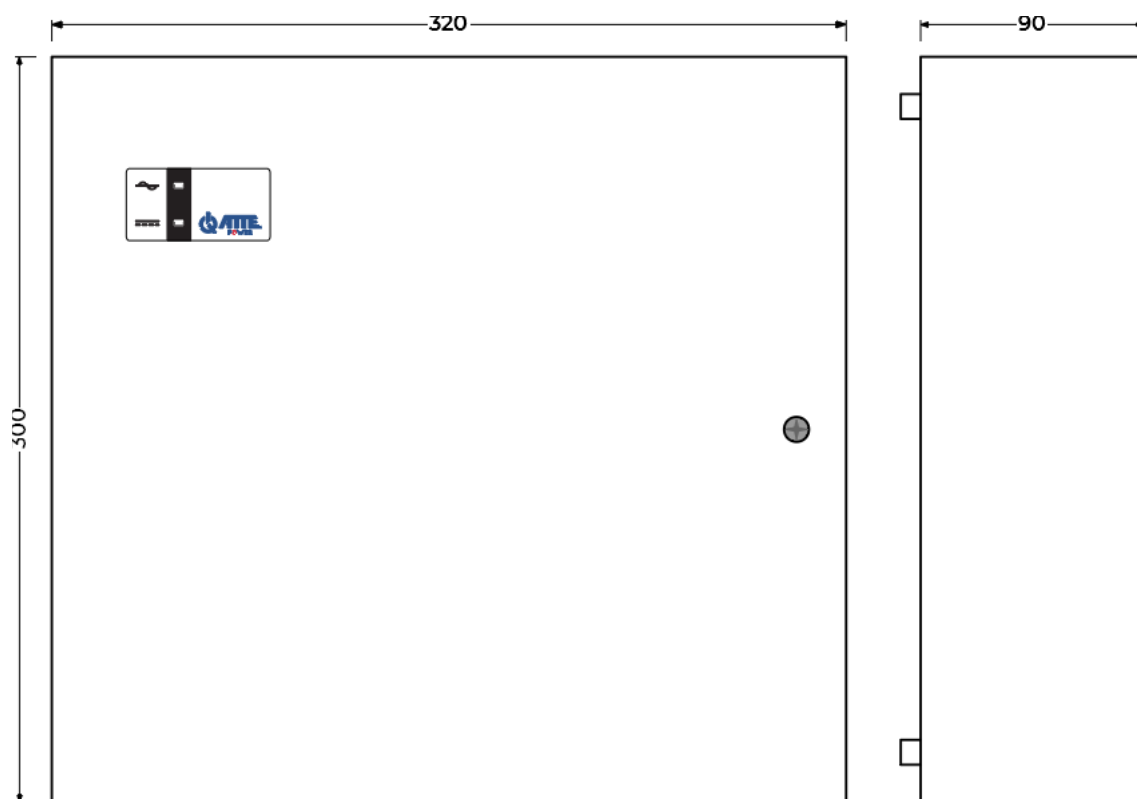

General view of the device

Technical Specification


LAN Ports	6 ports RJ45 10/100Mbps 5 x PoE, 1 x UPLINK
Ports Functions	LAN 1 ... LAN 4: INPUT PoE PASSIVE (up to 40W) - switch power supply OUTPUT PoE - PoE PASSIVE (up to 40W) or 802.3af (up to 15,4W), 802.3at (up to 30W) LAN5: INPUT PoE PASSIVE (up to 70W) - switch power supply OUTPUT PoE (VIN > 48 VDC) - PoE PASSIVE (up to 70W) or 802.3af (up to 15,4W), 802.3at (up to 30W) LAN6: UPLINK (non PoE)
Operating modes	Mode "STANDARD" (MODE = OFF) LAN 1 ... LAN 6 - 10/100Mbps, distance up to 100m Mode "LONG RANGE" (MODE = ON) LAN 1 ... LAN 4 - 10Mbps, distance up to 280m LAN 5 ... LAN 6 - 10/100Mbps, distance up to 100m
Battery	1 x gel or AGM 12V / 18Ah battery
Power Supply Output Voltage	12 VDC +/-15%
PoE Output Voltage	48 VDC +/- 2%
Power	72 W
Efficiency	90% @60W
Input Voltage	190 ... 260 VAC, 50 Hz
Battery Charging Current	1 A or 2 A (selected by jumper JP1)
Power Supply Input Protection	Slow-blow fuse 3,15A
Power Supply Output Protection	Mains power supply: Electronic overload protection at 9A (power supply restart is needed after short circuit) Battery power supply: Slow-blow fuse 6,3A
Ports Protection	LAN 1 ... LAN 6, VIN Overvoltage protection LAN 1...LAN 4 Short circuit protection at 0,75A with auto recovery LAN 5 Short circuit protection at 1,25A with auto recovery
Battery Circuit Protection	Battery reverse polarity protection and overload protection: Slow-blow fuse 6,3A Deep discharge protection: Battery disconnection below 10,8 V with auto recovery after mains returning
Indication	AUPS-70-120-OFF: LED1 YELLOW - mains power supply LED2 GREEN - output voltage LED3 RED - battery charging xPoE-6-11-OFF: LEDs in connectors LAN 1 ... LAN 5 - PoE power supply at specified port
Technical Outputs	AUPS-70-120-OFF: OUF – lack of +DC_OUT voltage ACF – lack of AC voltage Open collector output with maximum 50mA current (each output)
Startup with no AC power	START button DIP-SWITCH PoE ON/OFF - positions 2 ... 6 (LAN 1 ... LAN 5)
Power Control	PoE OFF on specified port - position OFF PoE ON on specified port - position ON
Housing Construction	Enclosure ABOX-F Enclosure material - steel plate 0,8 mm Enclosure painted with white paint

	Mounted tamper switch System drilling 4,8 mm in 10,8 mm pitch Wall distance Mounting holes 6 mm
Assembly	Wall mounting through 6 mm mounting holes
Ingress Protection Rating	IP20
Operating Temperature	-10 ... +40°C
Dimensions	300 x 320 x 90 mm
Weight	2,38 kg

Safety Precautions

- The installation and wiring must be performed by a competent engineer. For permanently connected equipment, a readily accessible disconnect device must be incorporated in the fixed wiring. The device must be connected to the mains supply 230 VAC 50 Hz via a specified fused connection outlet.
- Despite the fact that the enclosure of the device has a high degree of protection, it is recommended that the device should be mounted in places protected from direct influence of atmospheric factors, in particular against rain and direct sunlight.
- Since the power supply does not have a switch to isolate the mains supply, the installer is responsible for notifying the user of the means of isolating the mains supply from the device.
- When replacing fuses, use original or compatible types. The exact parameters of the fuses can be found on the inside of the device cover.

WARNING

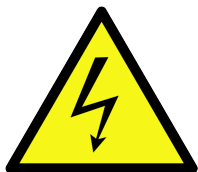

Before installation and during maintenance make sure that the mains voltage 230VAC is disconnected

Installation

- Mount the device in the selected location and connect the connecting wires.
- Connect Protective Earth wiring.
- Connect mains power supply to L, N terminals.
- Connect the camera cables.
- Turn on mains 230VAC power supply.
- After checking system operation, close the enclosure.

Operation Indication

- AUPS-70-120-OF LED1 YELLOW – mains power 230VAC
- AUPS-70-120-OF LED1 GREEN – output voltage
- AUPS-70-120-OF LED3 RED – battery charging
- xPoE-6-11-OF LED in connectors LAN1 ... LAN5 – PoE power on specified port

WEEE MARKING



This symbol on the product or on its packaging indicates that the product must not be disposed of with normal household waste. Instead such equipment must be disposed of by arranging to return it to a designated collection point for the recycling of waste electrical and electronic equipment.

